

Assembly Help Upright Bikes: Crooked Console

Nautilus Models: U616 | U618

Schwinn Models: 130 | 170

If the console on the upright bike is crooked or does not sit straight/level:

1. Loosen the four screws on the back of the console.
2. Adjust the console to it's proper position.
3. Retighten the screws.
4. **If the issue persists**, loosen the screws at the base of the mast assembly.
5. Adjust the mast to it's proper position (so the console is straight).
6. **If the issue persists**, replace the mast assembly.

Categories :

Root / *NEW* Troubleshooting Format / Bikes / Nautilus Uprights
Root / *NEW* Troubleshooting Format / Bikes / Schwinn Uprights

Valid from :

Valid until :